



## Winged Bay Window Details

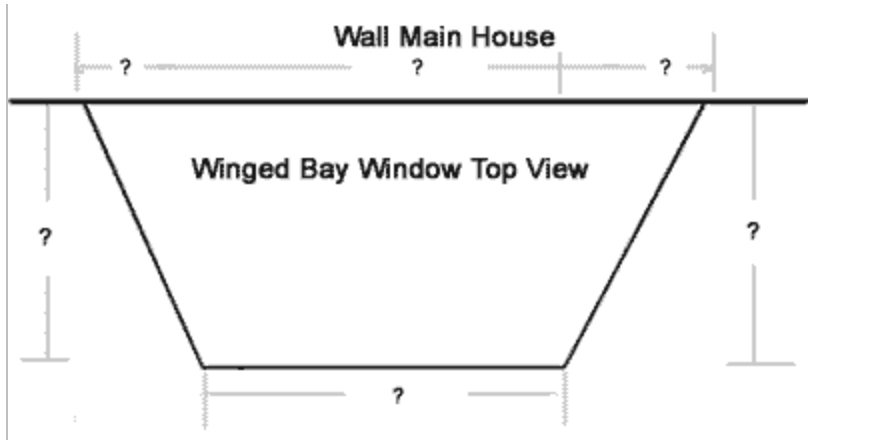

The image above shows the bay window from above looking down.

This image shows the end view of the bay window/awning and how to get the the height and depth measurements. The long side of the triangle may be straight (Suburban models) or curved. If your curve is concave (curves down) then you have a sweep style bay window. If it's convex, you have a Classic Round or or a Classic Oval bay window. (see others.)

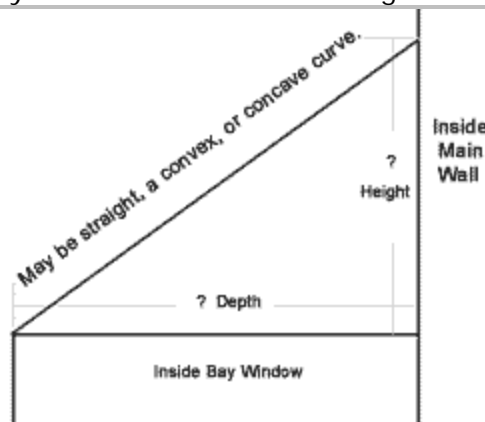

[Download a printer friendly version.](#)

[Close Window](#)